

MicroVantage™ WGPS Series

Water Grade Polysulfone Membrane Filter Cartridges

MicroVantage Ultra Premium Filter Series



- Absolute retention ratings from 0.03 to 1.0 microns
- 6.0 square feet (0.56 m²) of media surface area per ten inch length for optimal performance
- Highly tapered asymmetric pore structure provides excellent flow rate and dirt holding capacity
- Cost effective absolute filtration for less critical applications - not integrity tested
- Rigid, molded cage protects pleated media and strengthens structural stability
- Manufactured in state-of-the-art white room for high purity
- Complies with Food & Drug Administration's CFR criteria for food & beverage contact.
- Meets USP Class VI Biological Test for plastics
- Available in common and end cap configurations to fit most filter housings
- Produced in standard lengths up to 40 inches

Applications

RO Pre/Post Filtration	Food & Beverage
DI Water	Bottled Water
Plating Solutions	Microelectronics
Specialty Chemicals	Process Water
Water & Wastewater	Cosmetics

Specifications & Operating Parameters

Pore Sizes 0.03, 0.05, 0.1, 0.2, 0.45, 0.65, 1.0 microns absolute retention

Nominal Lengths 9.75" (24.7 cm), 10" (25.4 cm), 20" (50.8 cm), 30" (76.2 cm), 40" (101.6 cm)

Outside Diameter 2.67" (6.78 cm)

Inside Diameter 1.0" (2.54 cm)

Media Surface Area 6.0 sq.ft. (0.56 m²) per 10 inches filter length

Gaskets/O-rings

Silicone, Buna N, EPR, Viton, Teflon Encapsulated Viton (O-rings only)

Materials of Construction

Filter Media:	Polysulfone
Outer Cage	Polypropylene
Inner Core:	Polypropylene
End caps:	Polypropylene

Maximum Operating Temperature 176°F (80°C)

Recommended Change-out Differential Pressure 35 psid (2.4 bar)

Maximum Differential (Collapse) Pressure

Forward: 75 psid @ 70°F (5.2 bar @ 21°C)

Reverse: 40 psid @ 176°F (2.8 bar @ 80°C)

Sanitization and Sterilization

Hot water at 175°F (80°C) at 5 psid for 30 minutes


In-line steam at 257°F (125°C) @ 1 psid (0.7 bar) for 30 minutes

Autoclavable at 257°F (125°C) for 30 minutes

FDA and USP Compliance

All materials comply with the requirements of Food and Drug Administration Title 21 of The Code of Federal Regulations 174.5, 177.1520 and 177.1630. All components meet current USP Class VI biological tests for plastics

Flow vs. Pressure Drop

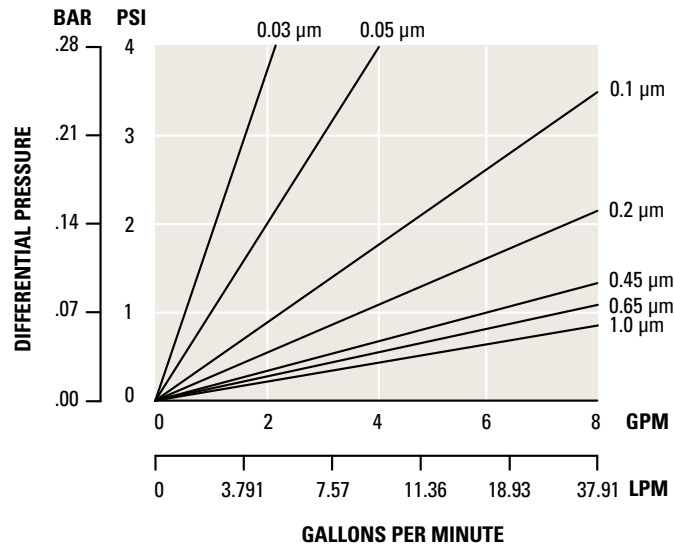

This chart represents typical water flow per 10" cartridge length. The test fluid is water at ambient temperature. Extrapolation for multiple elements tends to be linear, but as flows increase the ΔP of the housing becomes more apparent.

Ordering Guide (Example: WGPS0.2-10S4S)

WGPS	0.2	–	10	S4	S
PRODUCT CODE	MICRON		LENGTH	END CAP CONFIGURATION	GASKET / O-RING
WGPS	0.03 0.05 0.1 0.2 0.45 0.65 1.0		9.75" 10" 19.75" 20" 29.25" 30" 40"	S1 = DOE S3 = 222 w/ Fin End S4 = 222 w/ Flat End S5 = 226 w/ Fin End S6 = 226 w/ Flat End S7 = Internal O-ring with Recessed Plug S9 = Internal O-ring on both ends	B = Buna N E = EPR S = Silicone V = Viton T = Teflon Encapsulated Viton (O-ring only)

Filter Housings

We offer a full line of filter housings. From our single cartridge housings to our multi-cartridge housings. Contact us for more information.



1367 Osprey Dr. Unit 1
Ancaster, ON L9G 4V5

Ph: (905) 304-8157 Fax: (905) 304-9227
info@novafiltrationtech.com www.novafiltrationtech.com